


Biolytix Multipod Wiring Instructions

On Tank 1 (EcoPod)

- There is a conduit entry gland on the side of the tank just below the join between the lid and tank.
- Remove the 100mm diameter access cap above the conduit entry.
- Thread the 5 core cable and conduit (from BioPod tank) into the conduit entry gland and pull the 5 core cable out of the 100mm access in tank lid.
- Retrieve the Y connector that is inside the tank close to the 100mm access cap.
- Unscrew the single gland and straight section from the Y connector and thread these onto the 5 core cable.
- Connect the 5 core cable as follows:

L = Brown
 N = Blue
 Earth = Green
 1 = White
 2 = Orange

Terminal
 numbers
 here

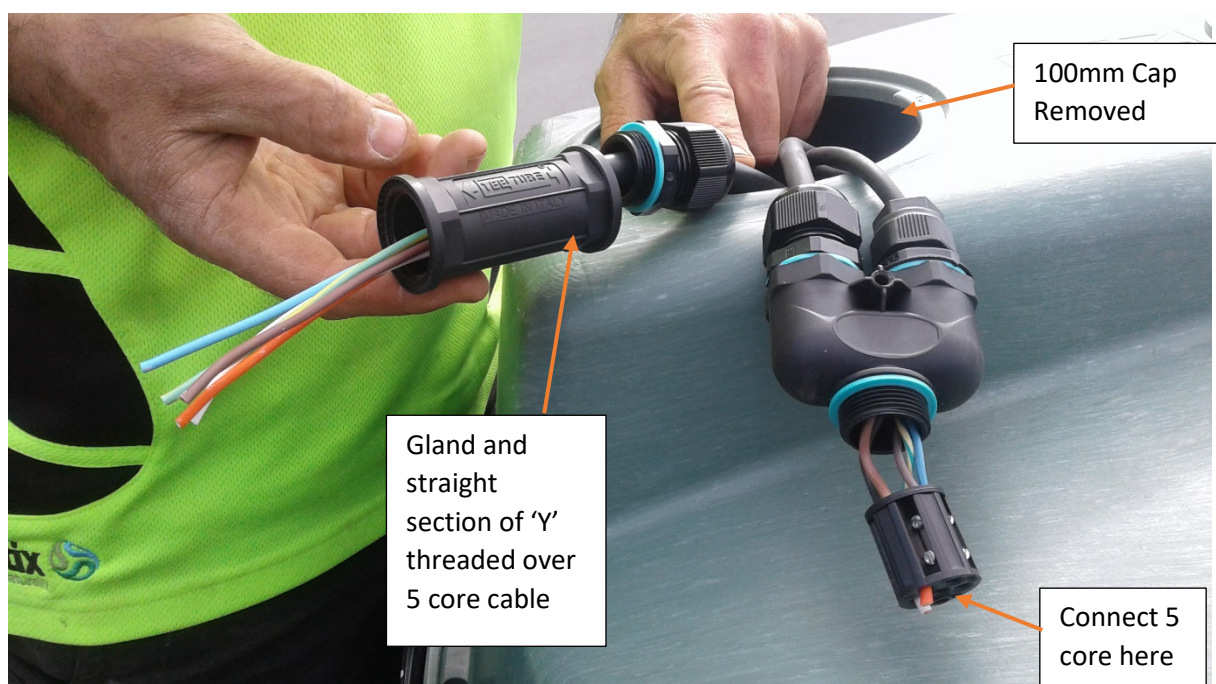

- Reassemble 'Y' Connector tightening glands and seals
- Place back in tank
- Replace 100 mm Cap
- Once power on check pump in EcoPod operates when float raised. Check alarm functions when high level (top) float raised